

The Original Formula

Metrology Casting Material

From **FLEXBAR**®

ALL METALS

ALL PLASTICS

NON-METALS

RUBBER

PAPER OR CARDBOARD

WOOD

MARBLE

CERAMIC & GLASS





Flexbar Reprorubber is the state-of-the-art metrology-grade, self-curing casting material. Now it's faster and easier to create virtually perfect replicas of both internal and external forms. Offered in three different viscosities, Reprorubber kits produce quick "zero shrinkage" reproductions in less than 10 minutes. Reprorubber flawless castings make it simple to check internal and external forms for non-destructive inspection and to measure for accuracy – even in hard-to-access part dimensions and surface finish geometrics.

Flexbar Flexibility

Reprorubber sets the standards for simplicity and versatility. The easy-to-mix, two-part base/catalyst system comes in three viscosities:

- **1**. *Reprorubber* Thin Pour (Light Green) for internal forms requiring superior flow and detail.
- **2.** Reprorubber Medium Body (Orange) for both internal and external applications.
- **3**. Reprorubber Quick Setting Putty (Light Blue) for internal and external applications and with the ability to withstand temperatures of 600° F (315.5° C) or more.

Convenient Pre-Filled Cartridges Also Available

The Repro Mix II Quick Dispense Cartridge System eliminates manual mixing. A dual barrel, reusable, rugged dispensing gun utilizes pre-filled *Reprorubber* cartridges in Thin Pour and Medium Orange viscosities. Disposable helix mixing nozzles can be used for each application, making the system waste-free and even more convenient to use.

Reprorubber offers numerous advantages over other hard-copy replicating materials:

- Quick casting zero shrinkage
- No release agent required will not stick to part.
- Surface finish replication is exact with excellent optical properties easily checked on an optical comparator or video inspection machine.
- Copies can be recopied from original mold.
- Replicas are permanent will not leach out, ooze out, or outgas.
- No more 16 hour cure time as with RTV silicones.
- More accurate than all other RTV compounds.

Industrial Applications

- Metalworking
- Automotive
- Aerospace
- Oil & Gas
- Medical Devices
- Plastics
- Sheet Metal & Stampings
- Forensics
- Art Restorations
- More

Flexbar Reprorubber® Self-Curing Formula — For the Measure of Perfection

Reprorubber – the easy metrology casting material:

- Easy to use convenient kits in 3 viscosities.
- Easy to mix non-toxic materials.
- Easy to remove the replica from the mold.
- Easy to cross-section with knife or razor.
- Easy to inspect internal & external forms.
- Easy to check on optical. scanner or microscope.





- Start to finish: approximately 12 minutes.
- Kits include graduated mixing cups, wooden spatulas and instructions.

New Reprorubber® Thin **Pour Prefilled Cartridges Final Color - LIGHT GREEN**


Same viscosity and durometer as Original Reprorubber Thin Pour. Disposable prefilled dual barrel 50ml cartridges can quickly mix and dispense casting material

utilizing the REPRO-MIX II Gun System. For internal-shape applications where a thin pour will completely fill the cavity without voids. A complete replica casting is quickly formed.

- Cure time is approximately 10 minutes.
- Start to finish: approximately 12 minutes.

Final Color - ORANGE

New Medium Body (Medium Viscosity - Medium Durometer) casting material ideal for both internal and external applications. Disposable



- Mix time: 15-30 seconds and cure time is 5-6 minutes.
- Start to finish: 6-8 minutes.

Original Reprorubber® Quick Setting Putty Final Color - LIGHT BLUE

Roll two equal-sized balls of catalyst putty and base putty and simply knead them together like dough. Excellent for external shapes. Simply spread over master, pushing down with fingers, and wait for cure 8-10 minutes.

> You have 1 or 2 minutes of manipulation time, therefore 12 minutes start to finish. You can also cast internal shapes and cavities but some pressure should be applied such as a weighted object on top.



ORDERING INFORMATION — ORIGINAL MIX YOUR OWN KITS

Original Reprorubber® Thin Pour **Final Color - LIGHT GREEN**

Trial Size Kit:

Order No. 16116 Thin Pour 130ml Trial Kit

Standard Size Kits:

Order No. 16135 Thin Pour 380ml Kit Order No. 16137 Case of 10 each 380ml Kits



Original Reprorubber® Quick Setting Putty **Final Color - LIGHT BLUE**

Trial Size Kit:

Order No. 16129 220ml Quick Setting Putty Trial Kit

Other Kits:

Order No. 16130 13/4 lb. (520ml) Introductory Kit Order No. 16131 7 lb. (2150ml) Economy Kit



Quick Dispense Cartridge System Kits

Reprorubber Quick Dispense Cartridge System Kits contain everything you need to easily create Highly Accurate, Zero Shrinkage replicas. Each kit includes 1 each Repro-Mix II Reusable Dispensing Gun, 6 each 50ml Prefilled Reprorubber Disposable Cartridges, 15 Disposable Mixing Nozzles, 2 Micro Injector Snap-On Nozzles, and a Deluxe Fitted Carrying Case.



Kit No. 16305 Reprorubber Orange Also Available (see below) Thin Pour (Green) and Combo Kits.



No. 16301 Green No. 16306 Orange

Low cost, disposable mixing nozzle tips allow multiple applications.



Snap-on Micro Inject Nozzle (optional) for small holes and cavities

ORDERING COMPLETE KITS:

No. 16300 Reprorubber Thin Pour (Green)

Quick Dispense Cartridge System

Kit Complete.

No. 16305 Reprorubber Orange (Medium Body)

Quick Dispense Cartridge System

Kit Complete.

No. 16309 Reprorubber Combo Quick

Dispense Cartridge System Kit,

Includes 3 each Thin Pour & 3

each Orange.

SYSTEM REFILLS:

No. 16301 Reprorubber Thin Pour (Green) 50ml Cartridge, 1 each.

No. 16302 Reprorubber Thin Pour (Green) 50ml Cartridges, 6 pack.

No. 16306 Reprorubber Orange (Medium Body) 50ml Cartridge,1 each.

No. 16307 Reprorubber Orange (Medium Body) 50ml Cartridges, 6 pack.

No. 16311 Repro-Mix II Dispensing Gun (reusable).

No. 16313 Repro-Mix II Helix Mixing Nozzles, 15 Pack.

No. 16316 Repro-Mix II Helix Mixing Nozzles, 100 Pack.

No. 16315 Quick Dispense Cartridge System Fitted Case (without contents).

No. 16314 Micro Injector Snap-On Nozzle, Pack of 15.

PHYSICAL PROPERTIES AND APPLICATIONS

	REPRORUBBER THIN POUR	REPRORUBBER MEDIUM BODY ORANGE	REPRORUBBER QUICK SETTING PUTTY
Mix Time	15-30 seconds	15-30 seconds	Approximately 1 minute
Working Time (Manipulation Time)	2 minutes	2.5 minutes	1-2 minutes (from beginning of mix)
Setting Time (at room temperature)	10-15 minutes	5-6 minutes	8-10 minutes
Permanent Deformation	0.2%	0.3%	0.3%
Dimensional Stability	Less than 0.50%	Less than 0.40%	Less than -0.25%
Tear Strength	44psi	300psi	105psi
Elongation	60% at break	70% at break	6.3% at break
Durometer (Shore A-2)	30 (at 15 minutes)	40 (at 10 minutes)	50 (at 7 minutes)
Temperature Stability	1 week @ 23°C (72°F)	1 week @ 23°C (72°F)	1 week @ 23°C (72°F)
Detail Reproduction	EXCELLENT	EXCELLENT	EXCELLENT

APPLICATIONS

You can take impressions of:


- ALL METALS
 NON METALS
 PAPER OR CARDBOARD ITEMS
 WOOD, MARBLE, ETC.
- ALL PLASTICS RUBBER CERAMIC AND GLASS ITEMS

Other Uses Include:

- Prototypes of rubber type components such as gaskets, washers, etc.
- As a mask for high temperature plasma spray of metallic coatings.
- Making joints where flexibility is required.
- Fixturing where semi-rigid structure is desired.


PHYSICAL ADVANTAGES OVER THE HARD-COPY REPLICAS

- Replica is easy to remove even if there are under cuts or grooves.
- Cross-sectioning of replica is easily accomplished with a knife or razor.
- It can then be checked on an optical comparator or microscope.
- Surface finish replication is exact with excellent optical properties.
- Reprorubber copies can be recopied (copy from a "female mold" yields a male-shaped replica).
- Replicas are permanent will not leach out, ooze out, or outgas.
- NO MORE 16 HOUR CURE TIME AS WITH RTV SILICONES.
- MORE ACCURATE THAN ALL OTHER RTV COMPOUNDS.
- REPRORUBBER PUTTY will withstand up to 600°F (or more).

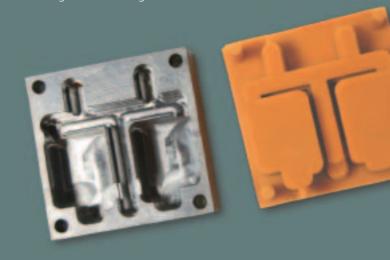





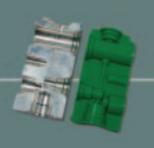



For additional information and applications, please visit our website, www.reprorubber.com.

Reprorubber® Single Application System

Convenient - Easy to Use Quick Replicas with Zero Shrinkage!

Reusable Applicator Cartridge Mix-Tip

INDUSTRIAL APPLICATIONS

NEW FROM FLEXBAR

Designed for small, accurate reproductions. No waste! No Mess!

Metalworking
Automotive
Aerospace
Oil & Gas
Medical Devices
Plastics
Sheet Metal & Stampings
Forensics
Art Restorations
Many More

- Single Use Cartridges (3.12ml each)
- Prefilled with Reprorubber Orange Medium Body
- Single Use system designed for small, accurate reproductions
- Kits include Applicator, Cartridges, Mix-Tips and Case

Introductory Kits

Model No.	Description
16170	10 Use Kit. Includes Applicator, 10 Cartridges, 10 Mix-Tips
16171	20 Use Kit. Includes Applicator, 20 Cartridges, 20 Mix-Tips

Refills and Accessories

Model No.	Description
16174-10	10 Piece Cartridge/Mix Tip Package
16174-20	20 Piece Cartridge/Mix Tip Package
16172	Hand Applicator
16173	Case w/adjustable dividers

FLEXBAR MACHINE CORPORATION

250 Gibbs Road Islandia, NY 11749 Phone 631.582.8440 Fax 631.582.8487 Toll-free 800.879.7575 www.flexbar.com



Unique Products • Innovative Solutions